
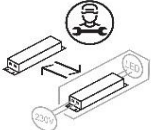










|  |   |   |
|--|---|---|
| Replace Control Gear   | ProductsLED Recessed Downlights                 | 1 of 1  |
|  | VECORDL6<br>VECORDL12<br>VECORDL18<br>VECORDL24 | <b>Control Gear Replaceable by Professional</b>  |

|   |   |  |   |   |
|---|---|--|---|---|
|  |  |  |  |  |
| 1 Fitting must be removed from mains power  | 2 Control Gear - LED Driver   | 3 Remove both connection covers - lever with screwdriver                           | 4 Remove Mains cable by pressing terminal release tabs                              | 5 Remove LED output cable by pressing terminal release tabs                         |
|   |  |  |   |   |
| 6 New LED Driver with terninal covers removed                                     | 7 Reconnect Mains and LED output cables to new Driver                             | 8 Replace Terminal covers firmly to secure cables                                  | 9 Reinstall Luminaire   |   |
|   |   |  |   |   |
|   |   |  |   |   |
|   |   |  |   |   |
|   |   |  |   |   |